


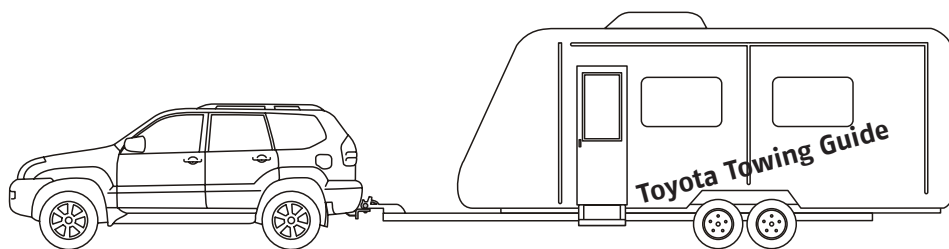

# Simple Towing Guide



**IMPORTANT NOTICE – Please read:**

Toyota Australia has used its best endeavours to ensure this material is accurate at the time of printing. However, all information must be confirmed with your Toyota dealer at the time of ordering, as specifications and details will change over time.

To the extent permitted by law, Toyota Australia will not be liable for any damage, loss or expense incurred as a result of reliance on the information and images contained in this material.

This publication is distributed nationally (other than in Western Australia) by Toyota Motor Corporation Australia Limited.

Material distributed in Western Australia by or on behalf of Prestige Motors Pty Ltd (for vehicles) and by Eastpoint Pty Ltd (for parts / accessories). Toyota Australia make no warranties regarding ( and will not be liable for) the accuracy of materials distributed in Western Australia.

**TOYOTA MOTOR CORPORATION AUSTRALIA LIMITED**

A.B.N 64 009 686 097

© 2010 TOYOTA MOTOR CORPORATION AUSTRALIA LIMITED

All rights reserved. This material may not be reproduced or copied, in whole or part, without the written permission of Toyota Motor Corporation Australia Limited, 155 Bertie Street, Port Melbourne, Victoria.

# Contents

<b>FORWARD .....</b>	<b>1</b>
<b>DEFINITIONS .....</b>	<b>1</b>
<b>LOADING .....</b>	<b>2</b>
<i>Tow ball Downloads.....</i>	<i>3</i>
<i>Trailer Loading.....</i>	<i>4</i>
<i>Weights.....</i>	<i>2</i>
<b>VEHICLE &amp; TRAILER COUPLING .....</b>	<b>5</b>
<i>Hitches.....</i>	<i>5</i>
<i>Load Distribution Hitches (LDH).....</i>	<i>7</i>
<b>OPERATION of VEHICLES &amp; TRAILERS COUPLED TOGETHER.....</b>	<b>8</b>
<i>Stability.....</i>	<i>8</i>
<b>ADDITIONAL IMPORTANT INFORMATION .....</b>	<b>9</b>
<i>Before Towing.....</i>	<i>10</i>
<i>Maintenance .....</i>	<i>11</i>
<i>Regulations.....</i>	<i>9</i>
<i>Safety Chains .....</i>	<i>10</i>
<i>Sway Control Device.....</i>	<i>9</i>
<i>Tow Bar Modification.....</i>	<i>11</i>
<i>Tow Bar Tongue.....</i>	<i>10</i>
<i>Towing Capacities.....</i>	<i>9</i>
<i>Trailer Brakes.....</i>	<i>9</i>
<i>Trailer Lights.....</i>	<i>9</i>
<i>Trailer Towing Tips.....</i>	<i>9</i>
<i>Warranty Limitations.....</i>	<i>9</i>

## FORWARD

Now that you have purchased a Toyota vehicle, we would like to pass on some towing tips to make your driving experience safe & enjoyable.

Toyota Motor Corporation Australia recommends Toyota Genuine Tow bars because they're designed and manufactured to exacting standards, giving you the best possible performance and peace of mind.

Remember that Toyota Genuine Tow bars and accessories, if installed by an authorised Toyota Dealer, are warranted for the remainder of the new vehicle warranty or 12 months, whichever is greater.

### Disclaimer

This publication is intended as a general guide only and covers single or tandem type trailers or caravans, of less than 3.5 tonne, with a rigid axle being towed via a rigid drawbar using a ball type coupling. This publication is not intended for use with dog trailers or trailers of more than 3.5 tonne.

## DEFINITIONS

*Gross Vehicle Mass or Weight (GVM/GVW) \** – The maximum laden weight of the vehicle; including the kerb weight of the vehicle plus driver, passengers, luggage, tow bar, bull bar, any other accessories and the tow ball down load.

*Kerb Mass or Weight \** – The weight of the vehicle including all options, fluids and full fuel tank, but not including accessories.

*Tare Mass or Weight \** – Is the same as Kerb Weight but with only 10 litres of fuel in the fuel tank instead of a full tank.

*Gross Vehicle Axle Mass or Weight \** – The maximum load on either the front or rear axle resulting from the distribution of the GVM.

*Gross Trailer Mass or Weight (GTM/GTW) \** – The maximum weight of the trailer and its load. This is also known as the Aggregate Trailer Mass (ATM)

*Gross Combination Mass or Weight \** – The maximum allowable mass or weight of a towing vehicle and its trailer.

\* Specified by the manufacturer

# LOADING

## Weights

Before towing confirm that the total Gross Vehicle Mass (GVM), Gross Trailer Mass (GTM), trailer tow ball downloads and Gross Vehicle Axle Weights are all within the limits stated by the vehicle and trailer manufacturers.

For more information on vehicle towing information refer to page 9.

The GVM can be found either in the "Trailer Towing" section of the vehicle owner's manual or on the vehicle compliance plate.

Remember that the gross trailer mass (GTM) may affect the load carrying capacity of the vehicle.


Examples of varying load conditions:

Vehicle GVM = 2740 kg


Gross Combination Mass = 4600 kg

Maximum Total Trailer Weight = 2250 kg


If the trailer is loaded to maximum, then  $4600\text{kg} - 2250\text{ kg} = 2350\text{ kg}$  maximum allowable vehicle load.

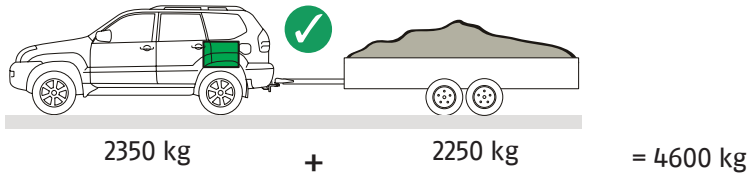

If the vehicle is loaded to maximum, then:  $4600\text{ kg} - 2740 = 1860\text{ kg}$  maximum allowable trailer load.

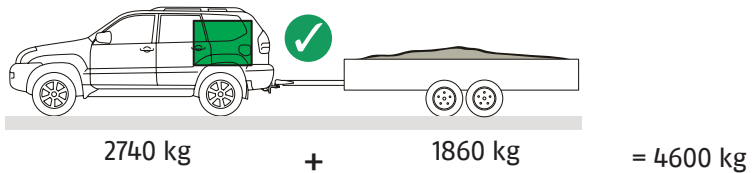


If the vehicle is loaded to maximum and the trailer is loaded to maximum, then the total weight will exceed the allowable limit.

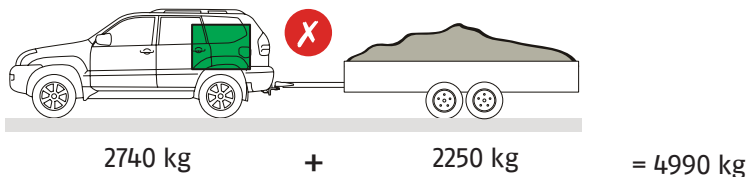

## Tow ball Downloads

Trailer cargo load should be distributed so that the tow ball download is between 9% – 11% of the total trailer weight and does not exceed the maximum load for the vehicle / tow bar design. Tow ball download information can be found in the “Trailer Towing” section of the vehicle owner’s manual or tow bar ID plate.

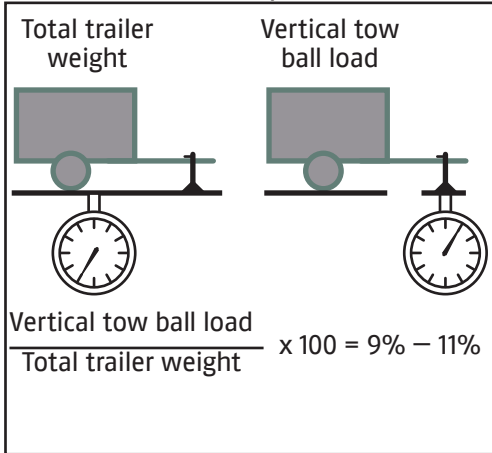

Trailer tow ball download weight can be determined by weighing the trailer at the coupling point. Always have the tow ball coupling at the same height as it is when coupled to the vehicle in the loaded condition.

Note: Use of a load distribution hitch does not reduce the trailer tow ball download.

**Trailer tow ball download weight must be included as part of the tow vehicle GVM.**



## Vehicle Loading

Your vehicle is designed primarily as a passenger carrying vehicle. Towing any type of trailer will affect the vehicle’s handling, performance, braking, durability and fuel consumption.

For your safety and the safety of others, do not overload the vehicle or trailer.

Confirm your vehicle’s Gross Vehicle Mass or Weight (GVM), refer to the “Trailer Towing” section, of the vehicle owner’s manual or a Toyota dealer for information on your vehicle’s GVM.

Ensure that any load is placed as close as possible to the rear axle.

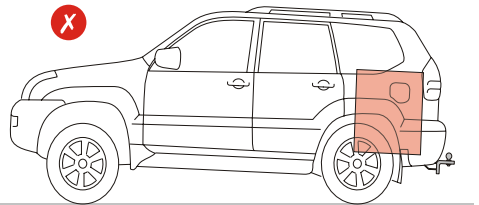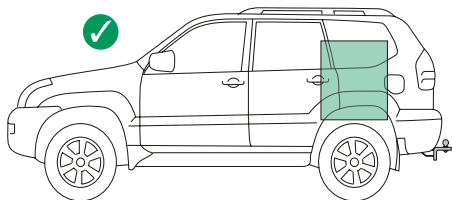


## Trailer Loading

Always ensure heavy items are placed over the trailer axles and as low down as possible, whilst maintaining a tow ball download of between 9 - 11%.

Ensure that the trailer coupling is the same height as the vehicle coupling point. In the first instance, always distribute vehicle and trailer loads accordingly to achieve a relatively flat vehicle and trailer posture without the assistance of load levelling or load distribution devices.

Overloading a trailer will place undue stress on the components of the trailer, tow bar and tow vehicle.

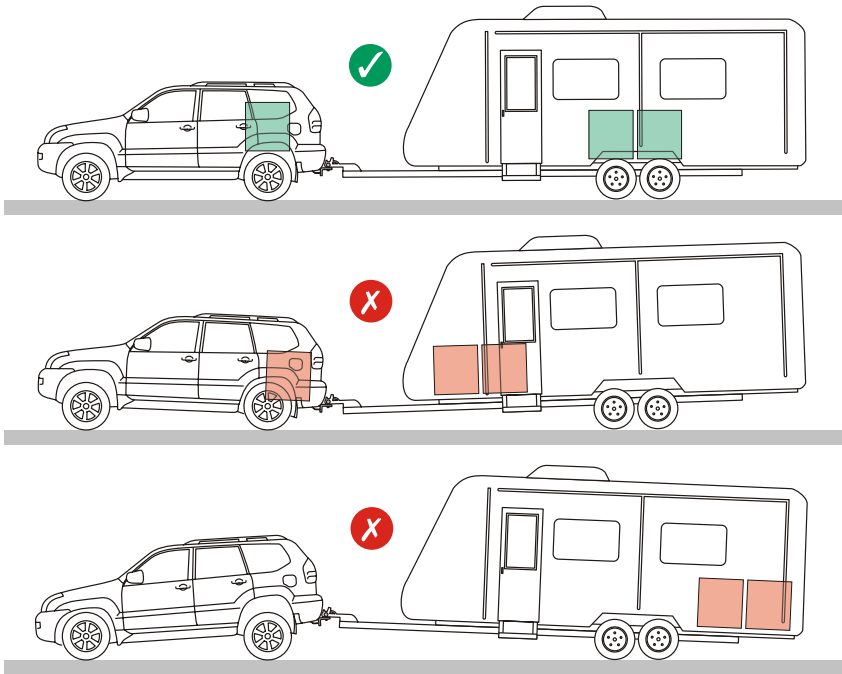


## VEHICLE & TRAILER COUPLING

### Hitches

Always use a genuine tow bar coupling appropriate for the type of towing to be undertaken, most commonly a 50mm ball.


If travelling off road, use a high articulation towing coupling such as a Pintle, Hyland or Treg style, for more information refer to your Toyota dealer.

Always maintain the genuine tow bar pivot point (tow ball) position.

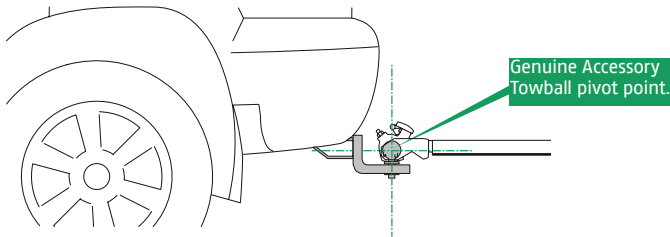


### CAUTION

High articulation couplings when used with load distribution hitches (LDH's) should only be used for highway driving. Do not use for off-road driving (Refer to page 7).

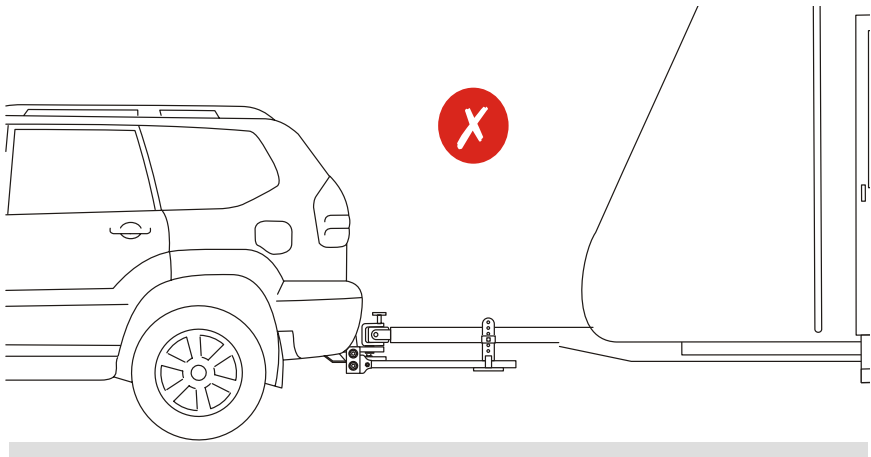



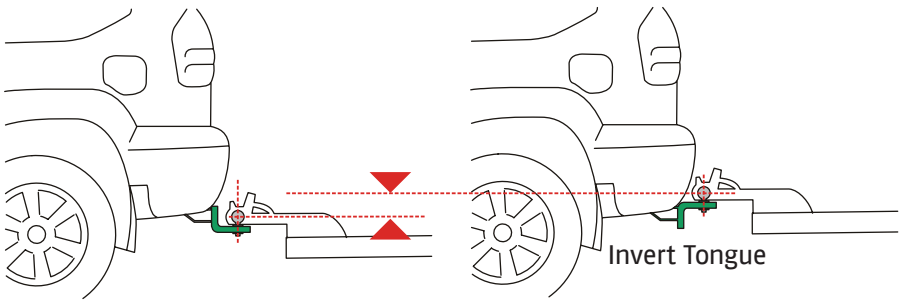


The levelness of the trailer may be adjusted on some tow bars by inverting the tow ball tongue to more appropriately suit the trailer.



**CAUTION**


Some Toyota Genuine tow bar tongues cannot be inverted. Tow ball position can only be changed to allowable genuine tow bar designed positions. The load rating may change with a different orientation of the tow bar tongue. A tow bar that can be inverted will have a plaque fitted to the tow bar showing the position that it can be changed to and the load rating in the changed position.

<b>WARNING</b>	
 <b>TOYOTA</b>	
FOR TRAILER TOWING ONLY TONGUE PART No. PZQ63-60074 THIS TONGUE IS TO BE USED ONLY WITH TOWBAR PART No. PZQ64-60074	
MAX. TOWBAR CAPACITY	3500 kg 
MAX. TOWBAR DOWNLOAD	350 kg 
MAX. TOWBAR CAPACITY	3300 kg 
MAX. TOWBAR DOWNLOAD	350 kg 

## Load Distribution Hitches (LDH)

LDH's should only be used on highway style roads as a dynamic supplementary support to a correctly loaded vehicle / trailer combination.

- Genuine tow bar tow ball position must be maintained.
- Do not use if a high articulation coupling is required.
- Do not use on vehicles with auto height adjusting suspensions.
- Trailer override brakes are not recommended with the use of LDH's.
- LDH's should never be used to compensate for incorrectly loaded vehicle & trailer combinations.
- If using LDH's ensure the spring bars are disengaged when driving or reversing into and out of driveways.
- When negotiating the following conditions, the LDH spring bars should be disconnected on:
  - Uneven or off-road terrain.
  - Short steep gutters.
  - Access ramps.
  - Speed humps and dips.
  - Performing tight turns at slow speeds.
  - Travelling on severe undulating road surfaces.
  - Steep abrupt inclines or declines.

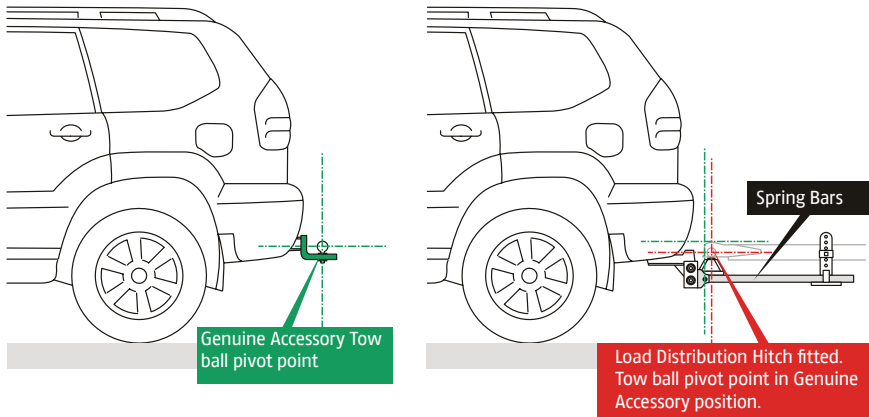

# OPERATION of VEHICLES & TRAILERS COUPLED TOGETHER

## **Stability**

There are many factors that will have an affect on the stability of your vehicle and or trailer/caravan.

Tyre pressures	Ensure all tyres and tyre pressures on the vehicle and trailer are to manufacturer's specifications.
Vehicle weight	Check that maximum loaded weight of the vehicle does not exceed the manufacturer's specification. Redistribute the load/weight in the vehicle and or trailer. Keeping in mind tow ball download.
Vehicle Axle Load	Ensure that the vehicle axle load is within manufactures specification. Refer to the vehicle owners manual for more information.
Trailer weight	Check that maximum loaded weight of the trailer does not exceed the manufacturer's specification; or the tow bar towing capacity.
Combined weight	Check that the combined vehicle and trailer weight does not exceed manufacturer's specification. If necessary redistribute the load/weight in the vehicle and or trailer. Keeping in mind tow ball download and tow bar capacity.
Tow ball download	Ensure tow ball download is correct. Adjust tow ball download to between 9% -11% of trailer weight to achieve the best stability.
Driving styles	Change driving styles to suit trailer towing and road condition. No fast steering inputs, hard braking, or high speeds.
Worn suspension	Check both vehicle and trailer for any worn or broken suspension components. Replace or repair accordingly.
Vehicle/trailer alignment	Check the alignment of the suspension on both vehicle & trailer. Repair or adjust accordingly.
Cross winds	Be aware of crosswinds and sudden wind gusts, reduce your speed accordingly.
Larger vehicles	Be prepared for wind buffeting and trailer movement whilst near trucks.
Correct trailer	Ensure the trailer is suited to the vehicle you are coupling to, size, width, drawbar length and wheel size.

## **ADDITIONAL IMPORTANT INFORMATION**

### ***Warranty Limitations***

Operating the vehicle in an overloaded condition or outside of Toyota's recommendations may void the vehicle warranty.

### ***Towing Capacities***

For vehicle towing capacities refer to the "Trailer Towing" section of the owner's manual, tow bar plaque, or your Toyota dealer.

#### **Note:**

- Ensure that your tow bar's towing capacity is capable of towing the load that you intend to apply to it.
- Vehicle weight, trailer weight and tow ball download can be measured at a public weigh bridge.

### ***Regulations***

Ensure that the trailer load distribution, axle loads, vehicle loading, trailer lights, trailer brakes and rear view mirrors comply with all Federal and State regulations.

### ***Trailer Lights***

Trailer lights must comply with federal and state regulations. See your Toyota dealer for the correct type of wiring and relays for your trailer. Check for correct operation of the trailer lights each time you attach the trailer. Direct splicing of the light to the vehicle wiring harness may damage your vehicle's electrical system. See your Toyota dealer for more information.

### ***Trailer Brakes***

Toyota recommends that trailer brakes conform to all federal and state regulations. When your trailer exceeds a certain weight, trailer brakes are required. For information on maximum un-braked trailer weight, refer to the vehicle owner's manual or your Toyota dealer.

### ***Sway Control Device***

If the total trailer weight is greater than the vehicle weight, use a sway control device. For more information, refer to the owner's manual or your Toyota dealer.

### ***Trailer Towing Tips***

Refer to your vehicle owner's manual or your Toyota dealer for towing tips for your vehicle.

## Safety Chains

Safety chains must always be used when towing any trailer. Ensure that the safety chains conform to all federal and state regulations.

### Before Towing

Before you begin towing your trailer, Toyota strongly recommends that you carry out a pre-towing safety check.




These checks include, but are not limited to:

- Correct vehicle tyre pressures
- Correct trailer tyre pressures
- Ensure the trailer lights operate correctly
- Correct installation of all towing equipment
- Ensure the tow ball is correctly tensioned
- Ensure the trailer cargo is securely loaded and tied down
- Ensure that all mirrors are installed

For more information, refer to your owner's manual or your Toyota dealer.

### Tow Bar Tongue


The load rating may change with a different orientation of the tow bar tongue. A tow bar that can be inverted will have a plaque fitted to the tow bar showing the position that it can be changed to and the load rating in the changed position.

<b>WARNING</b>		
 <b>TOYOTA</b>		
FOR TRAILER TOWING ONLY TONGUE PART No. PZQ63-60074 THIS TONGUE IS TO BE USED ONLY WITH TOWBAR PART No. PZQ64-60074		
MAX. TOWBAR CAPACITY	3500 kg	
MAX. TOWBAR DOWNLOAD	350 kg	
MAX. TOWBAR CAPACITY	3300 kg	
MAX. TOWBAR DOWNLOAD	350 kg	

## Anti-Rattle Bolt

Toyota recommends the removal of the tow bar tongue when not in use. The anti-rattle bolt and nut is designed to prevent movement of the tow bar tongue when the tongue is unloaded.

The anti-rattle bolt must be removed when towing or damage to the tow bar may occur.

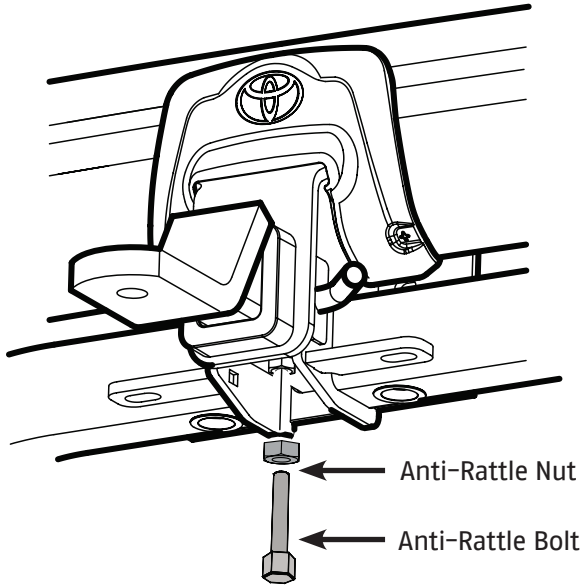

## ***Tow Bar Modification***

The tow bar is designed for trailer towing only. Do not modify the tow bar in any way as this may void the tow bar and vehicle warranties.

## ***Maintenance***

Towing a trailer puts an additional load on your vehicle, therefore it will require more frequent servicing. For more information refer to the "Additional Maintenance" section of your Warranty & Service Book or your Toyota dealer.





Part Number: TS01004  
Issue Number: 1009-00